

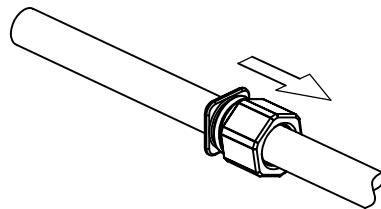


# Instruction Sheet

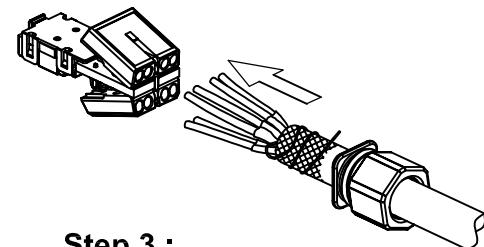


## Step 1 :

Put cable through the Nut.  
(OD:6~8mm;23~26AWG)

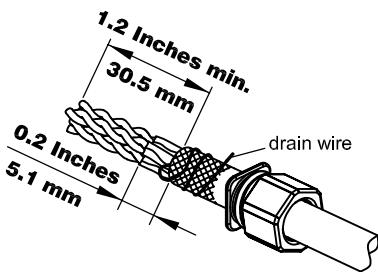


## Step 2 :

- ① Strip off cable jacket for at least 1.2 Inches and retain a 0.2 Inches foil from cable end.
- ② Back cover the braid then wrap the drain wire on it.

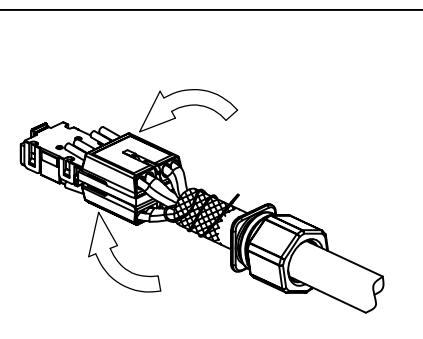


## Step 4 :

Press wiring management to terminate wires.

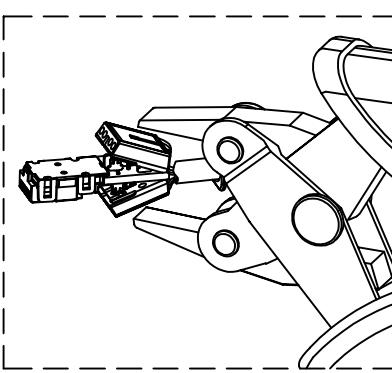


Or either by tool.

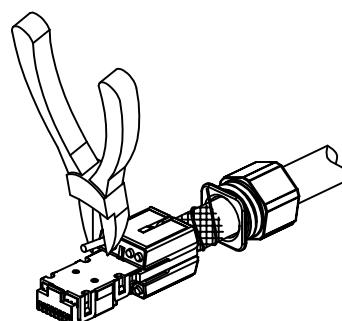


## Step 5 :

Trim excess wires.

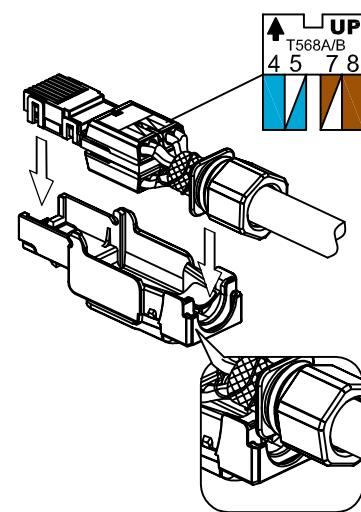


## Step 6 :

Assemble the wiring management("UP" on the top surface) into the groove of base housing, and locate the nut in the indicated slot.

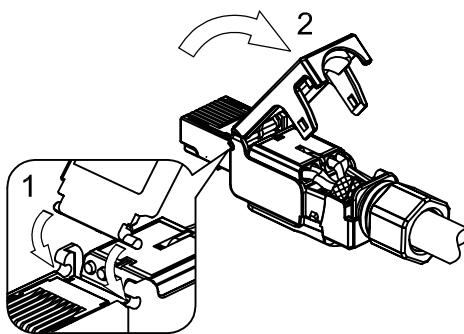

## Step 7 :


- 1.Put cover into revolving groove.
- 2.Then press the cover to engage with base housing.

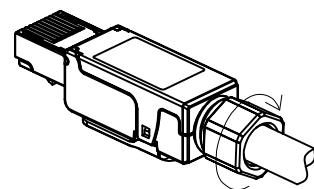

## Step 8 :


Lock and tight the nut.

### Disassembly Instruction:

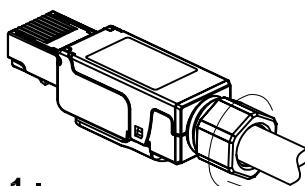


## Step 1 :

Unlock the nut.

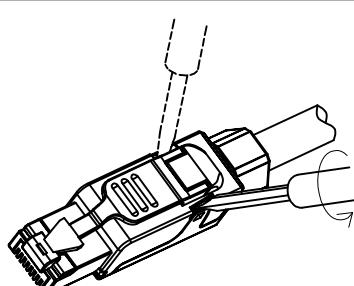

## Step 2 :

Insert the slotted screwdriver into the slot and rotate to open the jaws.

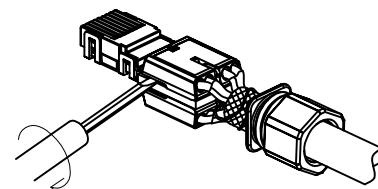

## Step 3 :

Insert the slotted screwdriver into the slot and rotate to open the wiring Management.